


The DV-76 uses the same basic serial commands as DV-68/66B. The DV-76 can use both straight RS-232 and TTL Level. In order to use either of the RS-232 ports you must follow the following chart below.

Mode	Pin Location	J23	J25	Pin Assignment
TTL	J21 / J22 (RJ-11)	Short	Open	V, TX, RX, G
RS-232	J24	Open	Short	TX, RX, G, G

The photo below shows the pin locations and pin 25 being shorted.

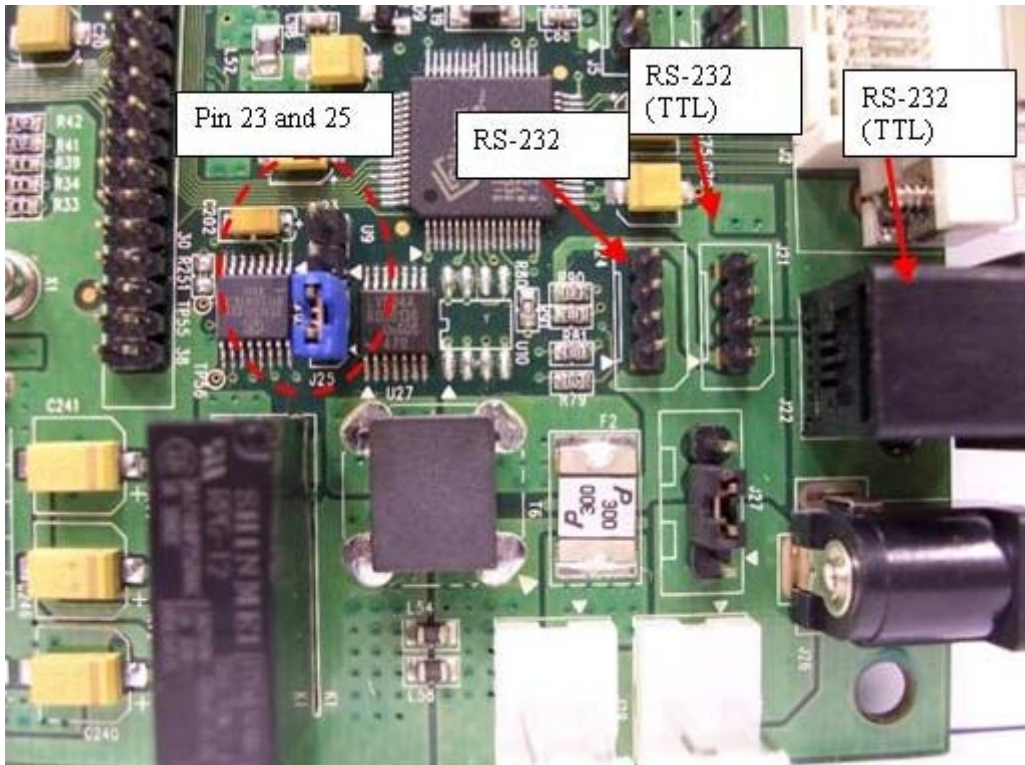

To short the pins 23 and 25 you can use a shunt jumper.