

DV-REM Remote Control for MedeaWiz DV-68 Operation

To access the OSD (on screen display menu)

Press the “Open / Close” then “Stop” then “Setup” keys on the remote. Once into the menu, use the blue arrow keys to highlight selections and the enter key in the center of the blue arrows to make the selection.

We have noted that on some of the menu selections, like the “Picture” (jpeg) sub-menu appear to be reversed, i.e. ON is actually OFF. Keep this in mind if the results you get when changing menu items are not what you expected. In any case it is a good idea to make notes of the currently highlighted options before changing them as a reference point.

In some cases the DV-68 will write a file to the Compact Flash card during menu changes. To revert to other operations it may be necessary to delete this file from the CF card.

Bill Kingsley
Team Kingsley LLC